

EDGESAFE™

Smart Gate



Installation Instructions/Operation and Maintenance Manual

Patent Pending

Models:

SG-96-PCY

**Refer to page 15 for required size dimensions.*

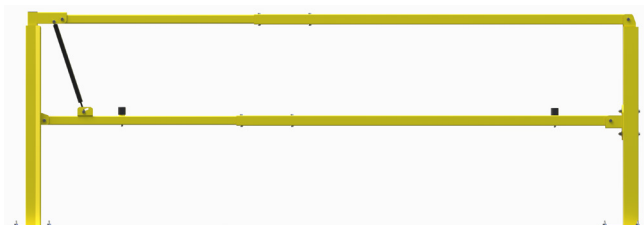


Table of Contents:

Safety Precautions	2
Product Information	2
Installation Instructions	4
Disassembling of Gate	12
Operation	13
Replacement Parts List	14
Size Reference Drawing	15
Inspection and Maintenance	16
Warranty Certificate	19

Contact Information

Mail

PS Safety Access
1150 South 48th Street
Grand Forks, ND 58201

Local Phone

701.746.4519

Website

pssafetyaccess.com

Hours of Operation

8 A.M. to 5 P.M. CT
Monday – Friday

Toll Free Phone

877.446.1519

Email

4psinfo@psindustries.com

IMPORTANT! Read entire Instruction and Operations Manual to become familiar with the product.

NOTICE This product is a fall protection product. The effectiveness of the product is directly related to the proper installation and operation of this product. Failure to properly maintain this product **will** affect performance.

Publication Notice

This manual has been compiled and published covering the latest product descriptions and specifications.

The contents of this manual and the specifications of this product are subject to change without notice.

PS Safety Access™ reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication.

PS Safety Access and/or its respective suppliers may make improvements and/or changes in the product(s)/ service(s) offered and/or the program(s) at any time without notice.

Retain this manual for future reference.

If you would like to download a copy of this manual, please go to pssafetyaccess.com

Product registration is an essential step to protecting your product, register Online at psindustries.com/contact/register-your-product/



Safety Precautions

The following icons are used throughout this Manual.

- ▲ DANGER** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
- ▲ WARNING** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
- ▲ CAUTION** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderated injury.
- NOTICE** Indicates manufacturer's statement of additional information.
- IMPORTANT!** Indicates a required action.
- CRITICAL** Indicates a vital component to product performance.

Product Information

NOTICE Unauthorized modification of or to the Product voids this Limited Warranty. Authorized modifications, received in writing from PS Industries® Incorporated, as long as the modification is accomplished in strict accordance with PS Industries' instructions, does not void warranty. If this product is modified or altered without manufactures permission, manufacturer is no longer responsible for the product design, engineering, or performance and owner assumes all responsibility. To request product modifications contact PS Industries Incorporated, 1150 S. 48th Street, Grand Forks, ND 58201, phone 877-446-1519, email: 4psinfo@psindustries.com

I. General Information

- A. This manual contains information regarding installation, operation, and maintenance of the PS Safety Access' Smart Gate.
- B. PS Safety Access recommends that the owner implement a regular preventative maintenance program to inspect and maintain the Smart Gate at a minimum, in accordance with the recommendations in this manual.

II. Operation Guidelines

- A. The Smart Gate is designed to meet OSHA Railing Standard 1910.29(b).
- B. Operation in a manner other than intended could result in damage or less than acceptable performance at time of need, for which the manufacturer will not be held responsible.
- C. The SG-96-PCY is adjustable from a minimum of 84" to a maximum 108" clear opening. The Gate will fit 84", 96", and 108" doors.

III. Safety Precautions

- A. Ensure opening is clear of all obstructions through the entire proposed travel of the Smart Gate during operation.
- B. Comply with all OSHA and ANSI Safety Regulations and/or company safety policies when installing.

▲ DANGER Ensure area below installation is blocked off from personnel during installation, and mounting surface is capable of supporting all loading. Structural analysis of mounting surface is the responsibility of the owner.

IMPORTANT! Verification of the structural sufficiency of supplied anchors based on site specific conditions and the existing structure is the responsibility of the installer/customer. Refer to the anchor manufacturer's installation instructions for installation requirements.

IV. Storage Prior to Installation of Product

- A. Store materials in a dry, ventilated location. If outdoor storage is required, block materials and tarp in a tent-like arrangement, elevated above the product with open sides to allow airflow.

V. Installation Site Preparation

NOTICE Before starting site preparation and installation of the Smart Gate, read the entire Operation and Maintenance Manual and review all installation instructions thoroughly.

- A. Clear work area of any debris.
- B. Ensure you have the necessary tools available.
- C. Obtain all required permits.
- D. Personnel: Determine the appropriate number of personnel required to perform installation and have them

Product Information

readily available at the project site. (1-2 people recommended)

E. Ensure all installation personnel utilize appropriate fall protection equipment and procedures during installation.


NOTE: Review inventory to ensure all parts are present for assembly/installation. Refer to part list below.

Recommended Tools:

1. Two (2) $\frac{9}{16}$ " Socket and Ratchets
2. Two (2) $\frac{7}{16}$ " Socket and Ratchets
3. One (1) Heavy-duty Flathead Screwdriver
4. One (1) Rubber Mallet
5. One (1) Tape Measure
6. One (1) $\frac{3}{16}$ " Allen Wrench

Smart Gate Part List (As shipped)

ITEM #	DESCRIPTION	QTY
1	LD SG;GATE POST	1
2	LD SG;GATE CATCH	1
3	LD SG;ADJ CLEVIS PCY	1
4	LD SG;2" LIFT ARM	2
5	LD SG;1.75" LIFT ARM WLD	1
6	LD SG;1.75" LIFT ARM	1
7	LD SG;GATE END	1
8	PLUG;SQ TUBE 2" O.D.	2
9	LD SG;DAMPENER W/ CLEVIS ENDS	2
10	LD SG;HARDWARE BAG	1

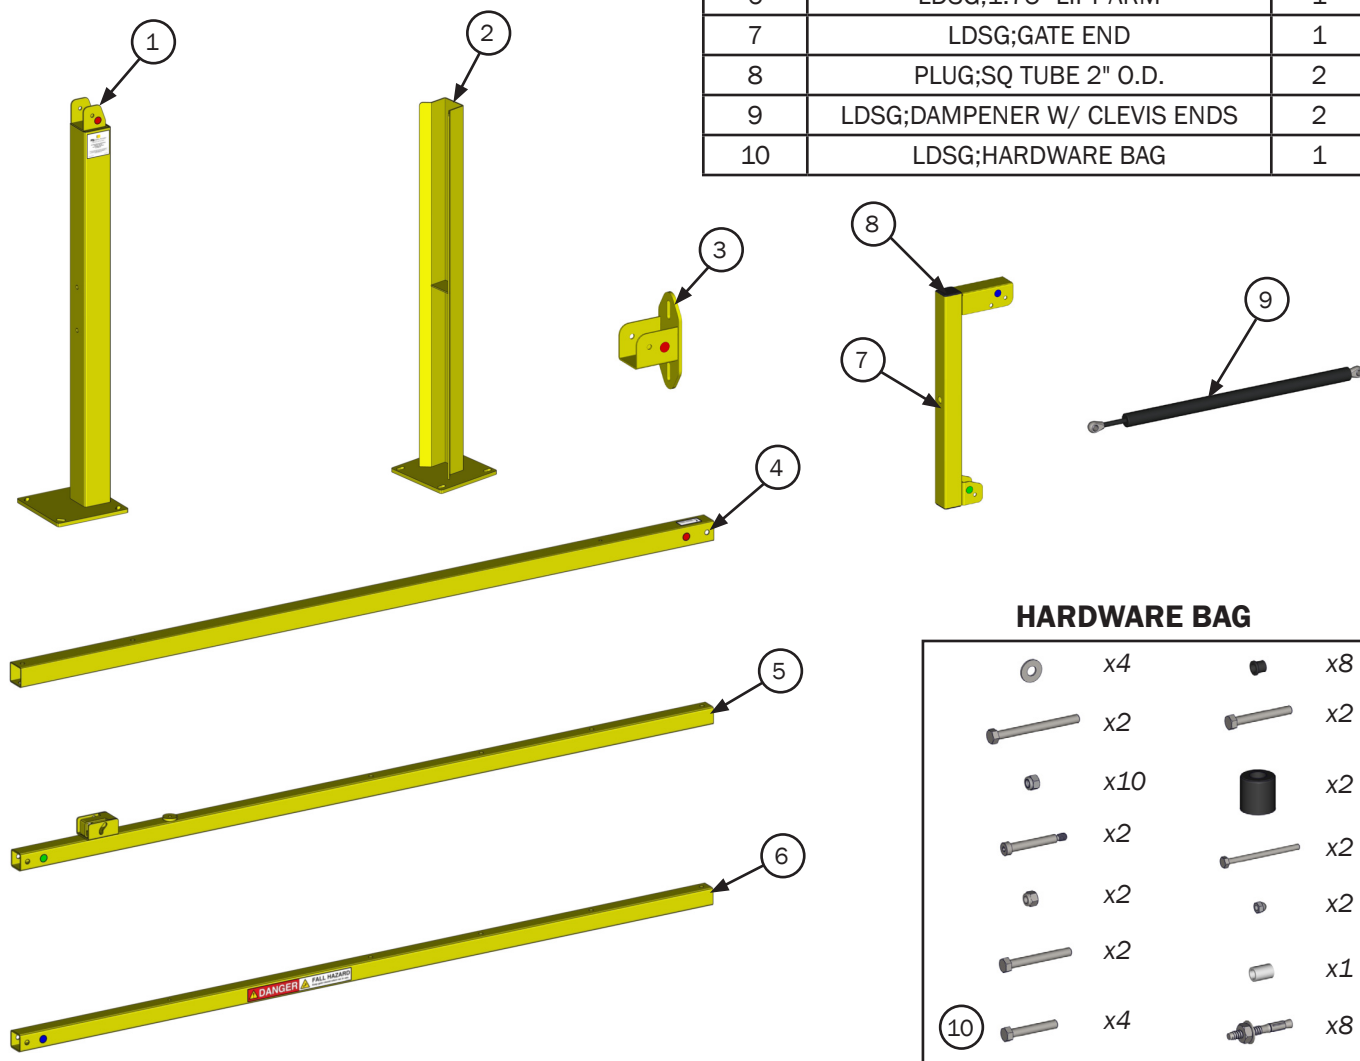

Installation

VI. Smart Gate Installation


NOTICE Colored circle decals are provided for easier installation, remove once install is complete. Refer to parts list on Page 3 for item numbers and descriptions.

NOTICE Base plates are slotted to allow adjustment for alignment.

STEP 1. Mark holes for the Gate Post (*red decal*) and anchor with concrete floor anchors.

- a. Measure and mark the center of the wall opening, using the Gate Size Reference Table to assist in centering the gate on the wall opening. (Gate Size Reference Drawing on Page 15).

Step 1 Illustration

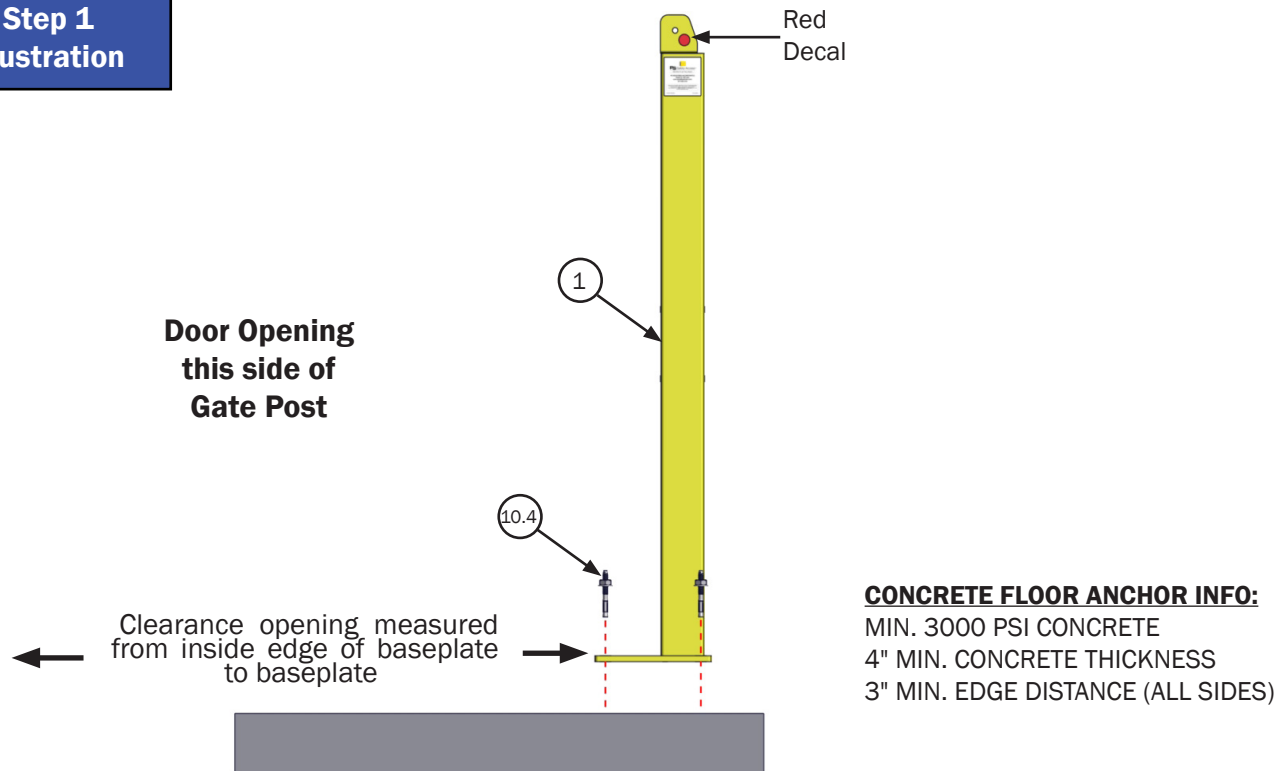

SG SIZE REFERENCE TABLE		
	CLEAR OPENING WIDTHS	CLEARANCE HEIGHT
SG-96-PCY*	84", 96", OR 108"	130 1/4" - 154 1/4"

*SG-96-PCY:

- a. Adjustable from a minimum of 84" to a maximum 108" clear opening.
- b. Gate will fit 84", 96", and 108" doors.

IMPORTANT! Follow Anchor Manufacturer's technical data manual/installation instructions for installation requirements and proper installation procedures.


Field concrete foundation design and complete consolidation of concrete surrounding embedded item(s) anchorage points NOT by PS Safety Access.

Installation

STEP 2. Attach Adjustable Clevis (*red decal*) with (2) $\frac{3}{8}$ " x 4" hex bolts, (2) $\frac{3}{8}$ " nylock nuts, and (4) $\frac{3}{8}$ " flat washers.

a. Tighten bolts, bracket height will be adjusted later in installation steps.

Step 2 Illustration

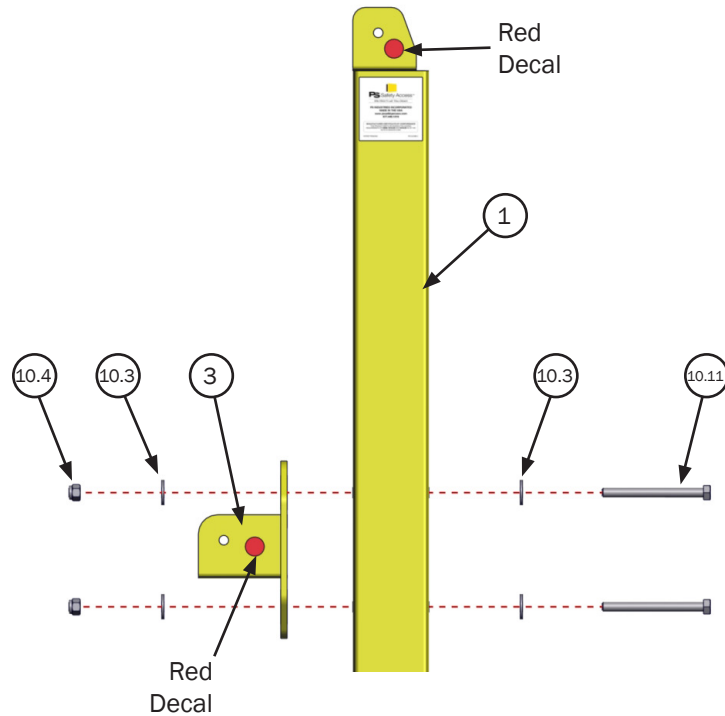


STEP 3. Use rubber mallet to gently hammer flange bearings into both sides of 2" Lift Arm.


a. Slide 2" Lift Arm (*red decal*) into Adjustable Clevis (*red decal*).

b. Insert $\frac{3}{8}$ " x 3" hex bolt and tighten $\frac{3}{8}$ " nylock nut.

Step 3 Illustration A

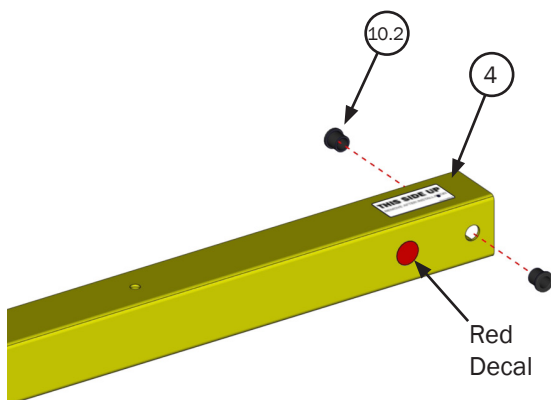

Step 3 Illustration B

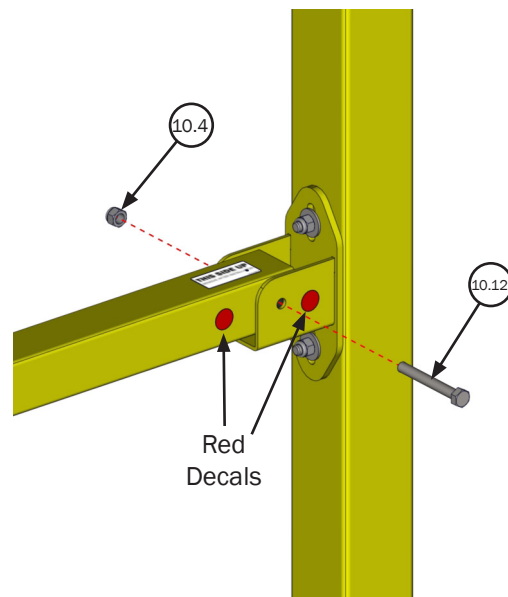


Installation

NOTICE The 1 3/4" Lift Arms have a series of pre-drilled holes to allow for adjustable gate width. See Size Reference Table (page 4) to determine available width adjustment.


NOTICE To protect the Powder Coat finish, do not slide beyond desired length.

STEP 4. Slide 1 3/4" Lower Lift Arm (*green decal*) into 2" Lift Arm (*red decal*) to the desired gate width.
a. Insert 3/8" x 2 1/4" hex bolts aligning with pre-drilled holes and tighten 3/8" nylock nuts.

**Step 4
Illustration A**

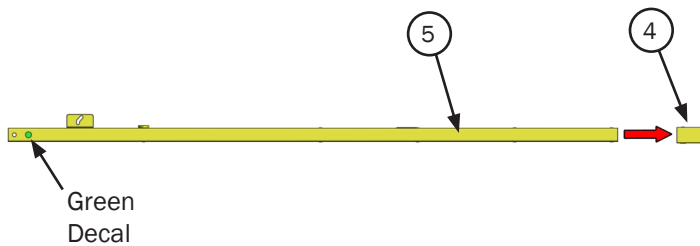


**Step 4
Illustration B**

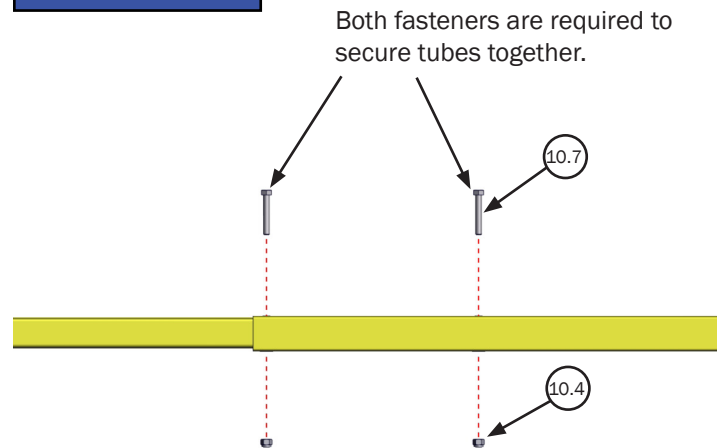


STEP 5. Use rubber mallet to gently hammer flange bearings into both sides of 1 3/4" Lower Lift Arm.
a. Slide the Gate End (*green decal*) over the 1 3/4" Lower Lift Arm (*green decal*).
b. Insert 3/8" x 2 3/4" hex bolt and tighten 3/8" nylock nut.

**Step 5
Illustration A**

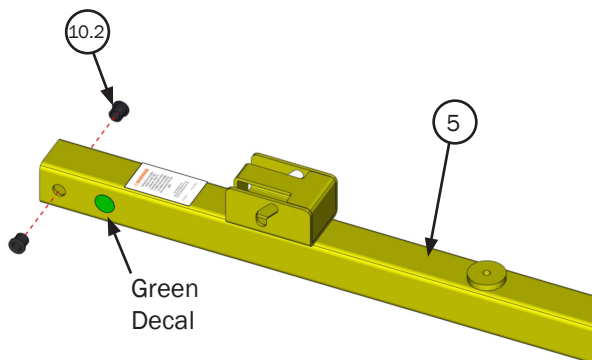

**Step 5
Illustration B**

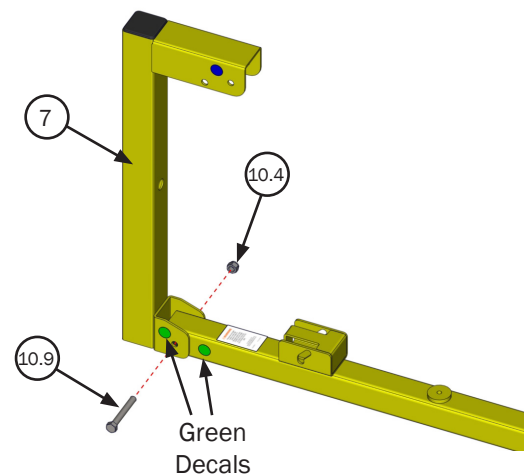


Installation


STEP 6. Use rubber mallet to gently hammer flange bearings into both sides of 2" Upper Lift Arm.

- Slide 2" Upper Lift Arm (*red decal*) into Adjustable Clevis (*red decal*) on Gate Post.
- Insert $\frac{3}{8}$ " x 3" hex bolt and tighten $\frac{3}{8}$ " nylock nut.

**Step 6
Illustration A**

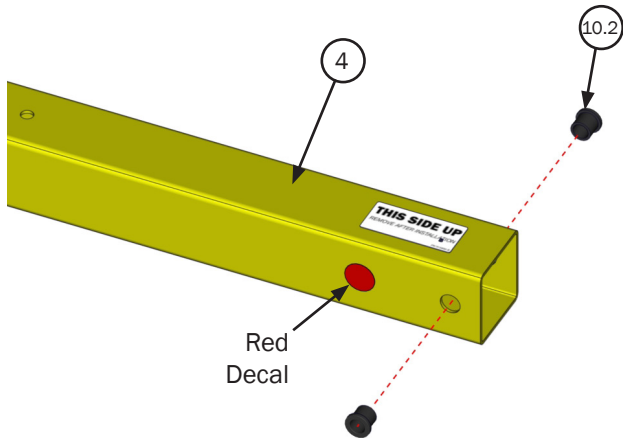

**Step 6
Illustration B**

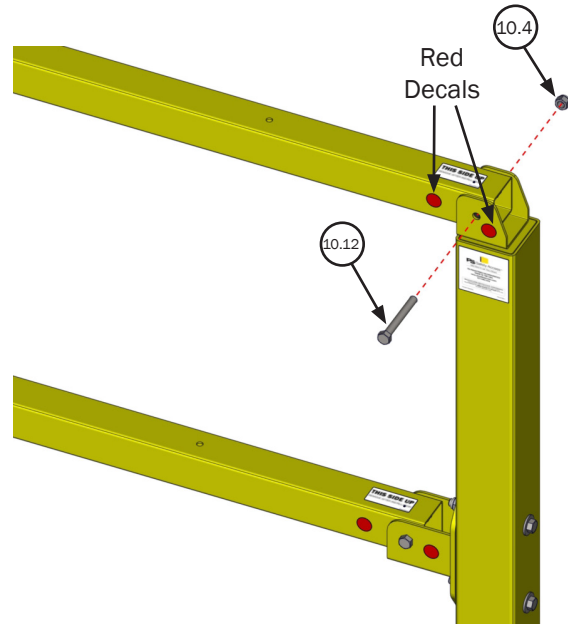


STEP 7. Slide 1 $\frac{3}{4}$ " Upper Lift Arm (*blue decal*) into 2" Lift Arm (*red decal*).


- Insert $\frac{3}{8}$ " x 2 $\frac{1}{4}$ " hex bolts and $\frac{3}{8}$ " nylock nuts at pre-drilled holes.

NOTICE To protect the Powder Coat finish, do not slide beyond desired length.

**Step 7
Illustration A**

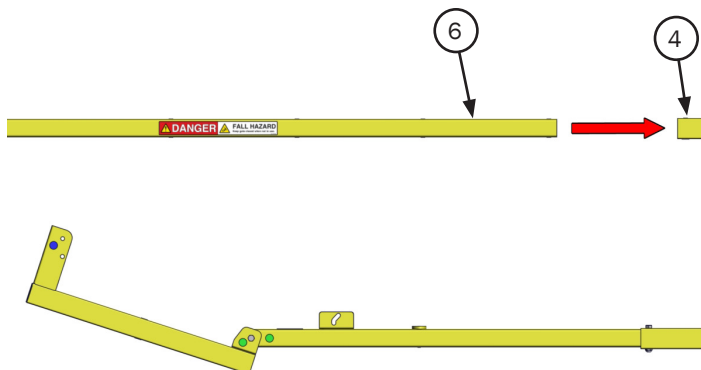


**Step 7
Illustration B**

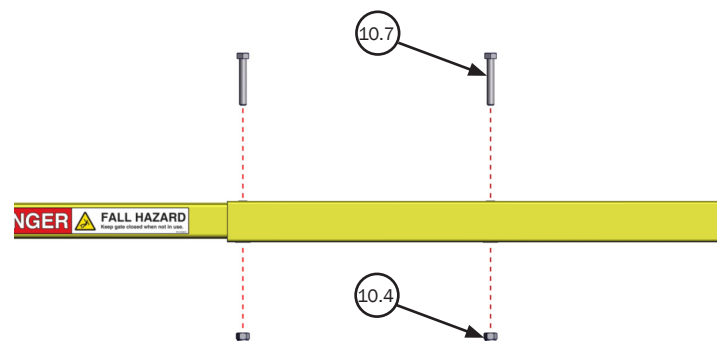


Installation

- STEP 8.** Use rubber mallet to gently hammer flange bearings into both sides of 1 3/4" Upper Lift Arm.
- Slide the Gate End (*blue decal*) over the 1 3/4" Upper Lift Arm (*blue decal*).
 - Insert 3/8" x 2 3/4" hex bolt and tighten 3/8" nylock nut.

**Step 8
Illustration A**

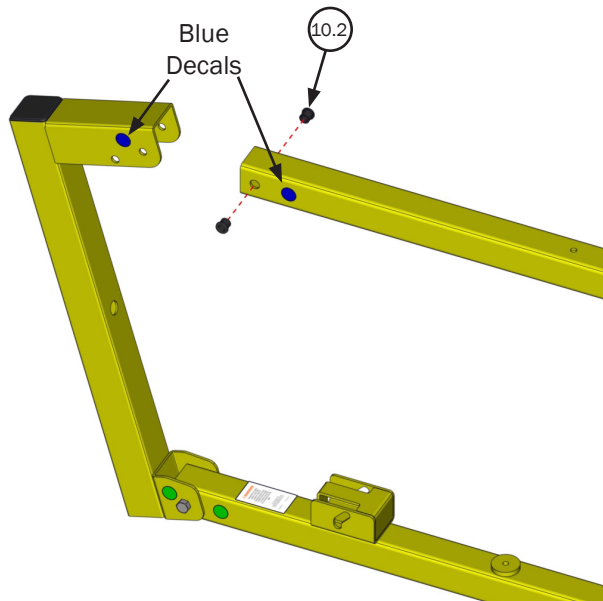

**Step 8
Illustration B**


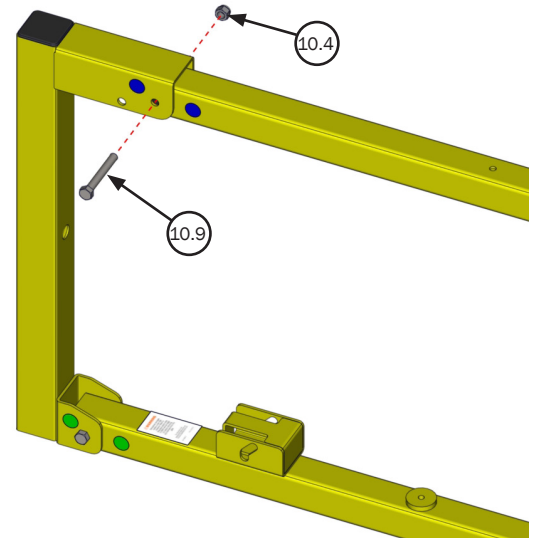


NOTICE Base plates are slotted to allow adjustment for alignment.

- STEP 9.** Mark out holes for the Gate Catch and anchor with concrete floor anchors.

**Step 9
Illustration**

Leave 1/4" of space between Gate End and inside of Gate Catch.

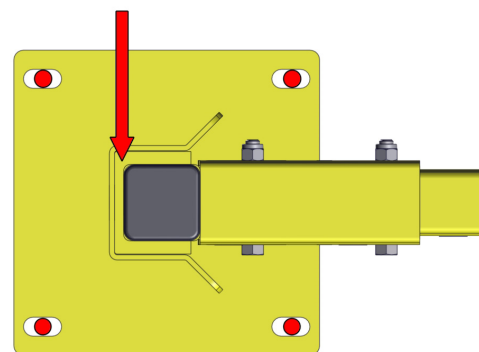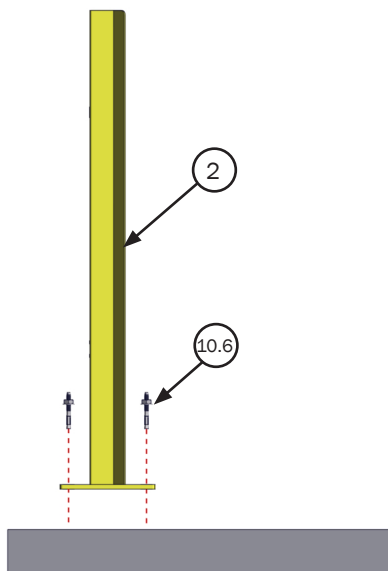


TOP VIEW

Installation


STEP 10. Add bumpers to Lower Lift Arms at both locations and snug with 1/4" bolts and 1/4" nylock capped nuts.

NOTICE Do not over-tighten, bumper should be snug but not compressed.

**Step 10
Illustration A**

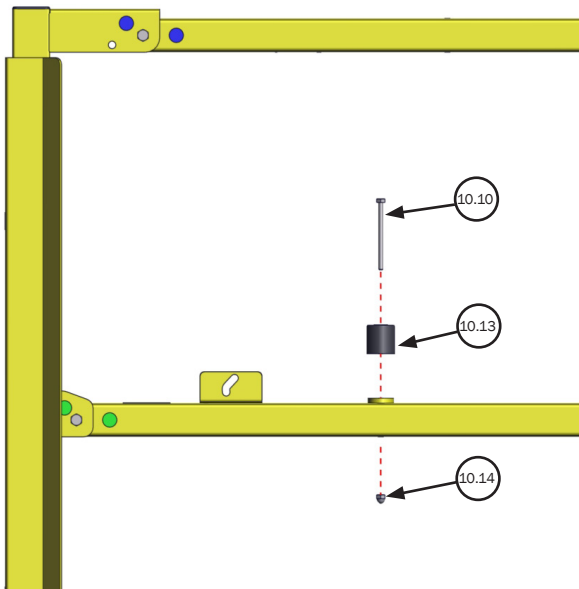

**Step 10
Illustration B**

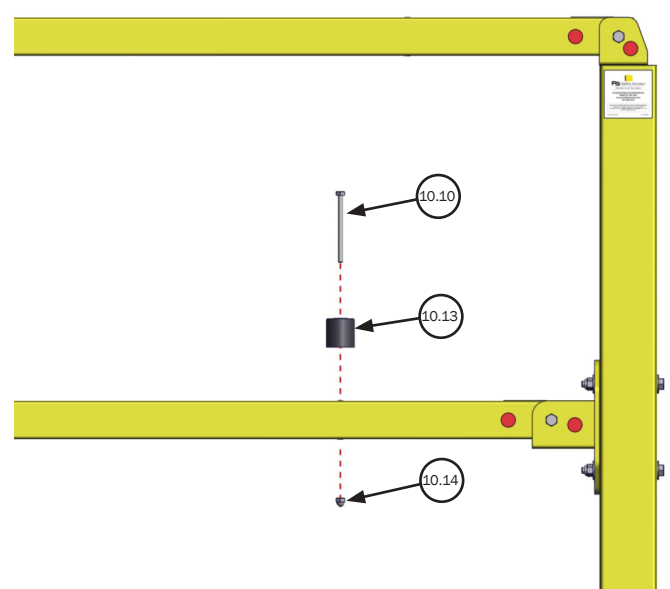

STEP 11. Rotate gate to the open position (gate arms vertical). Remove Gate Post from concrete floor anchors to free up the assembly, and lay on the ground in the extended position for improved access during dampener installation.

NOTICE To protect the Powder Coat finish, lay on cardboard.

**Step 11
Illustration**

Smart Gate Weights

SG-96-PCY	90 LBS
-----------	--------



 
⚠ WARNING The Smart Gates are heavy, verify weights, and use appropriate lifting procedures and equipment.

Installation



STEP 12. Install dampeners first into the Gate End (Illustration A), then into the slotted dampener bracket (Illustration B) with $\frac{3}{8}$ " shoulder bolts.

**Step 12
Illustration A**

10.8



**Step 12
Illustration B**

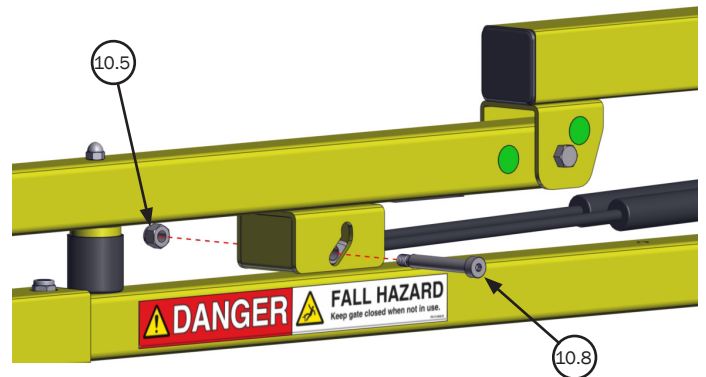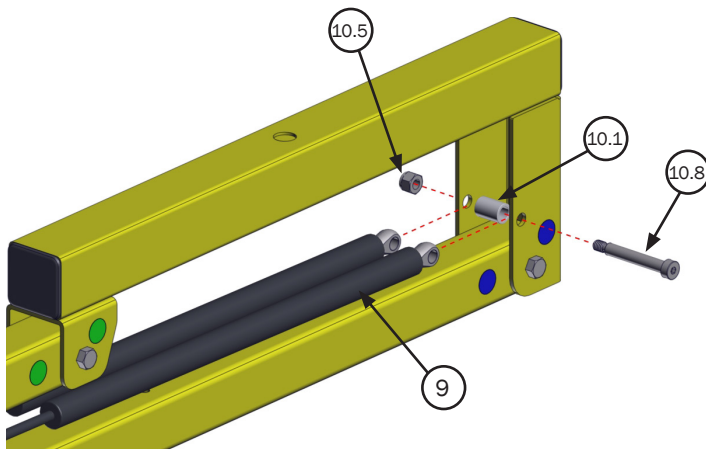




STEP 13. Fully extend assembly upward, anchor Gate Post back onto the floor surface, and tip gate down into Gate Catch. As the gate approaches fully closed, you should hear a loud noise of the dampeners self-setting.

STEP 14. Visually verify that the dampeners self-set into the appropriate location. If they did not, carefully tap them into place with a screwdriver. (Illustration B)

▲ DANGER Keep fingers clear of dampener pivot points, dampeners are under high pressure.

**Step 14
Illustration A**

**Step 14
Illustration B**

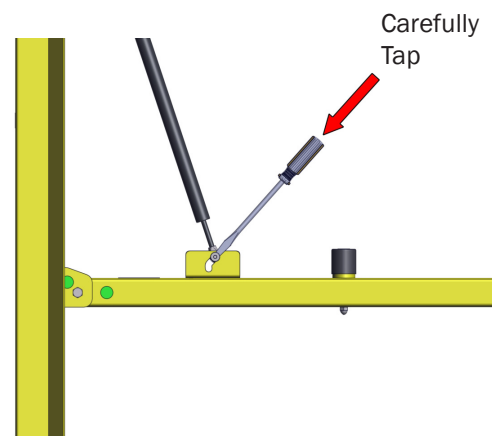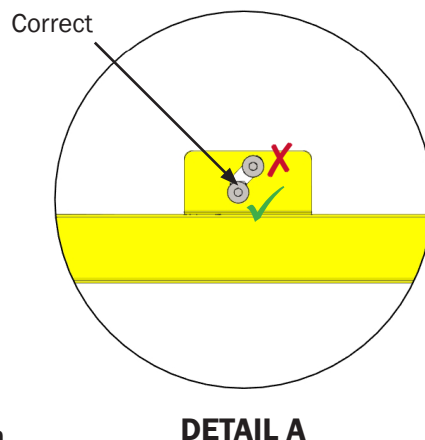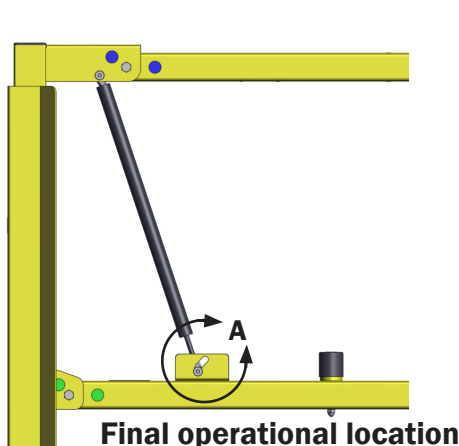


Installation

STEP 15. To ensure the gate opens to precisely 90°, the Adjustable Clevis needs to be set.

- Loosen $\frac{3}{8}$ " hex bolts and nylock nuts in Adjustable Clevis.
- Tip gate vertically to 90° and re-tighten $\frac{3}{8}$ " hex bolts and nuts.

Step 15 Illustration

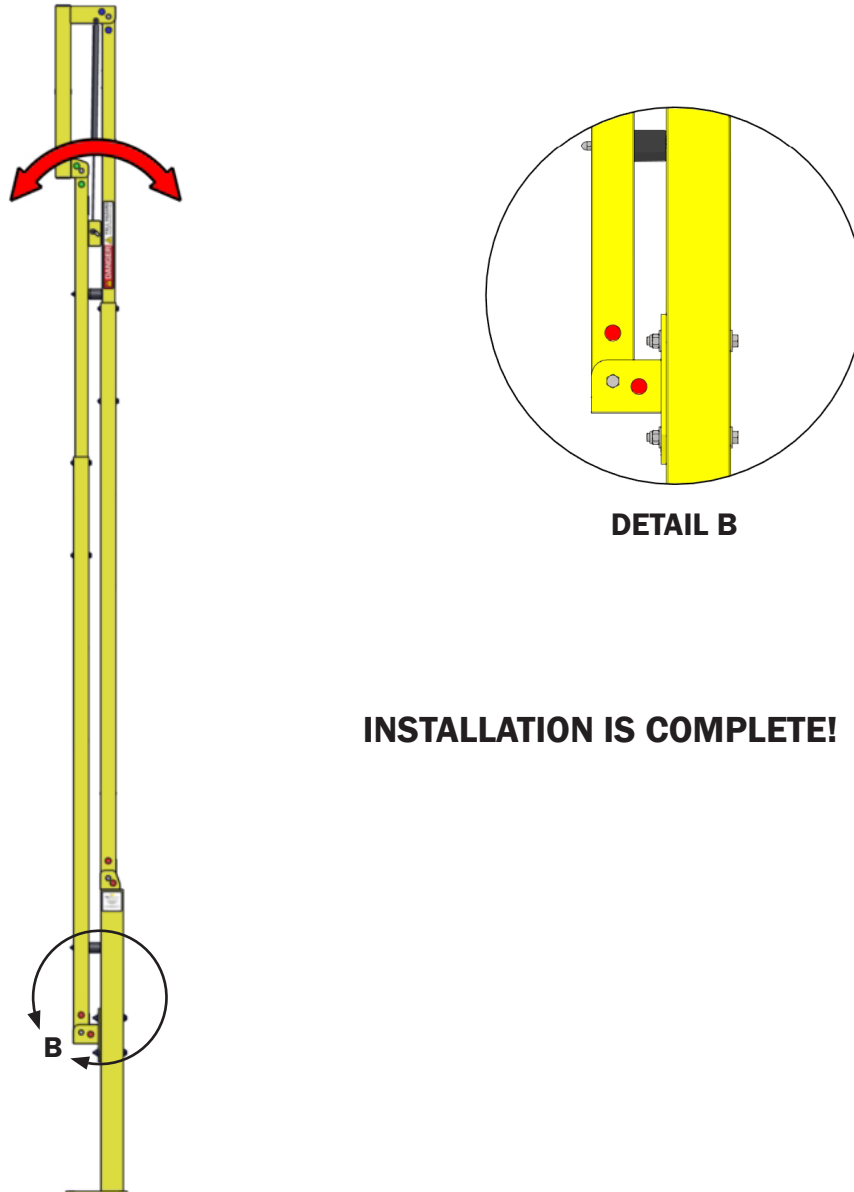

INSTALLATION IS COMPLETE!

NOTICE If preferred, remove colored circle decals once gate is assembled.

Disassembling Gate Instructions

VII. Disassembling Gate Instructions

NOTICE Only complete depressurization process if disassembling Smart Gate.

▲ DANGER System under high pressure. Refer to depressurization instructions in Operations and Maintenance Manual before doing any maintenance on the gate.

STEP 1. Rotate gate to the open position (gate arms vertical) before proceeding with Step 2.


▲ CAUTION High internal gate forces! Before removing Gate Post baseplate fasteners, the gate must be in the open position (gate arms vertical) so the dampeners are in a non-compressed state.

STEP 2. Remove Gate Post from concrete floor anchors to free up the assembly and lay on the ground to enable access to the dampeners.

STEP 3. Use a screwdriver to gently tap alternating sides of the dampener mounting $\frac{3}{8}$ " shoulder bolt into the long portion of the slot to relieve dampener pressure from $\frac{3}{8}$ " shoulder bolts.

▲ DANGER Keep fingers clear of dampener ends and installation slot.

NOTICE To protect the Powder Coat finish, lay on cardboard.

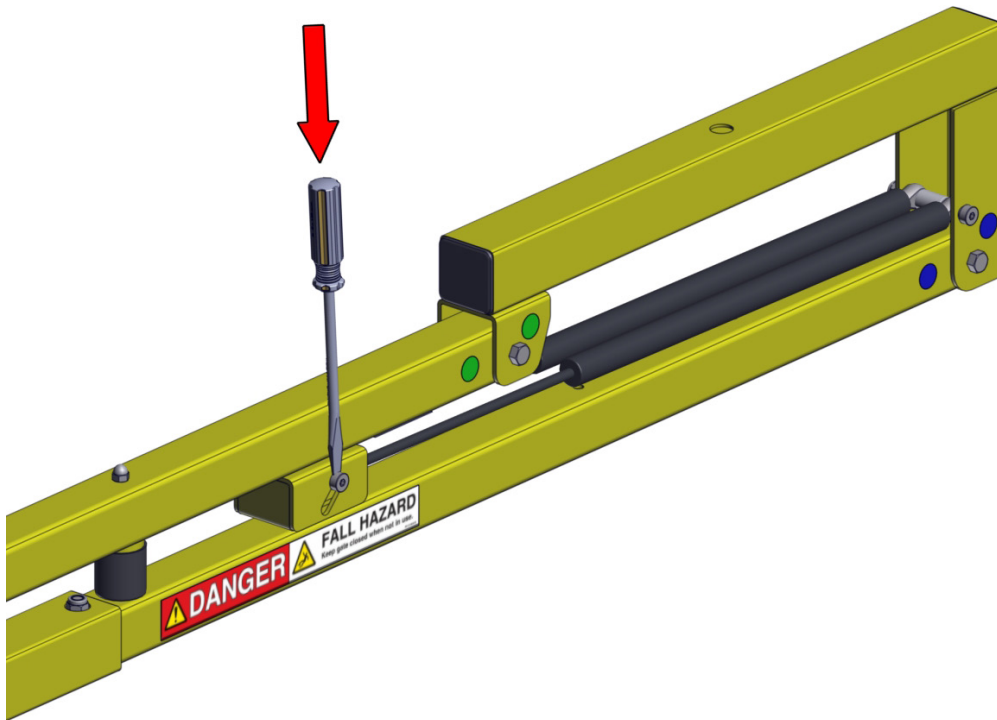


STEP 4. Remove $\frac{3}{8}$ " shoulder bolts at bolt ends of dampeners.

IMPORTANT! RETURN TO INSTALLATION STEPS 12-14 TO INSTALL NEW DAMPENER, AS SHOWN IN THIS OPERATIONS AND MAINTENANCE MANUAL.

Operation

VIII. Operation

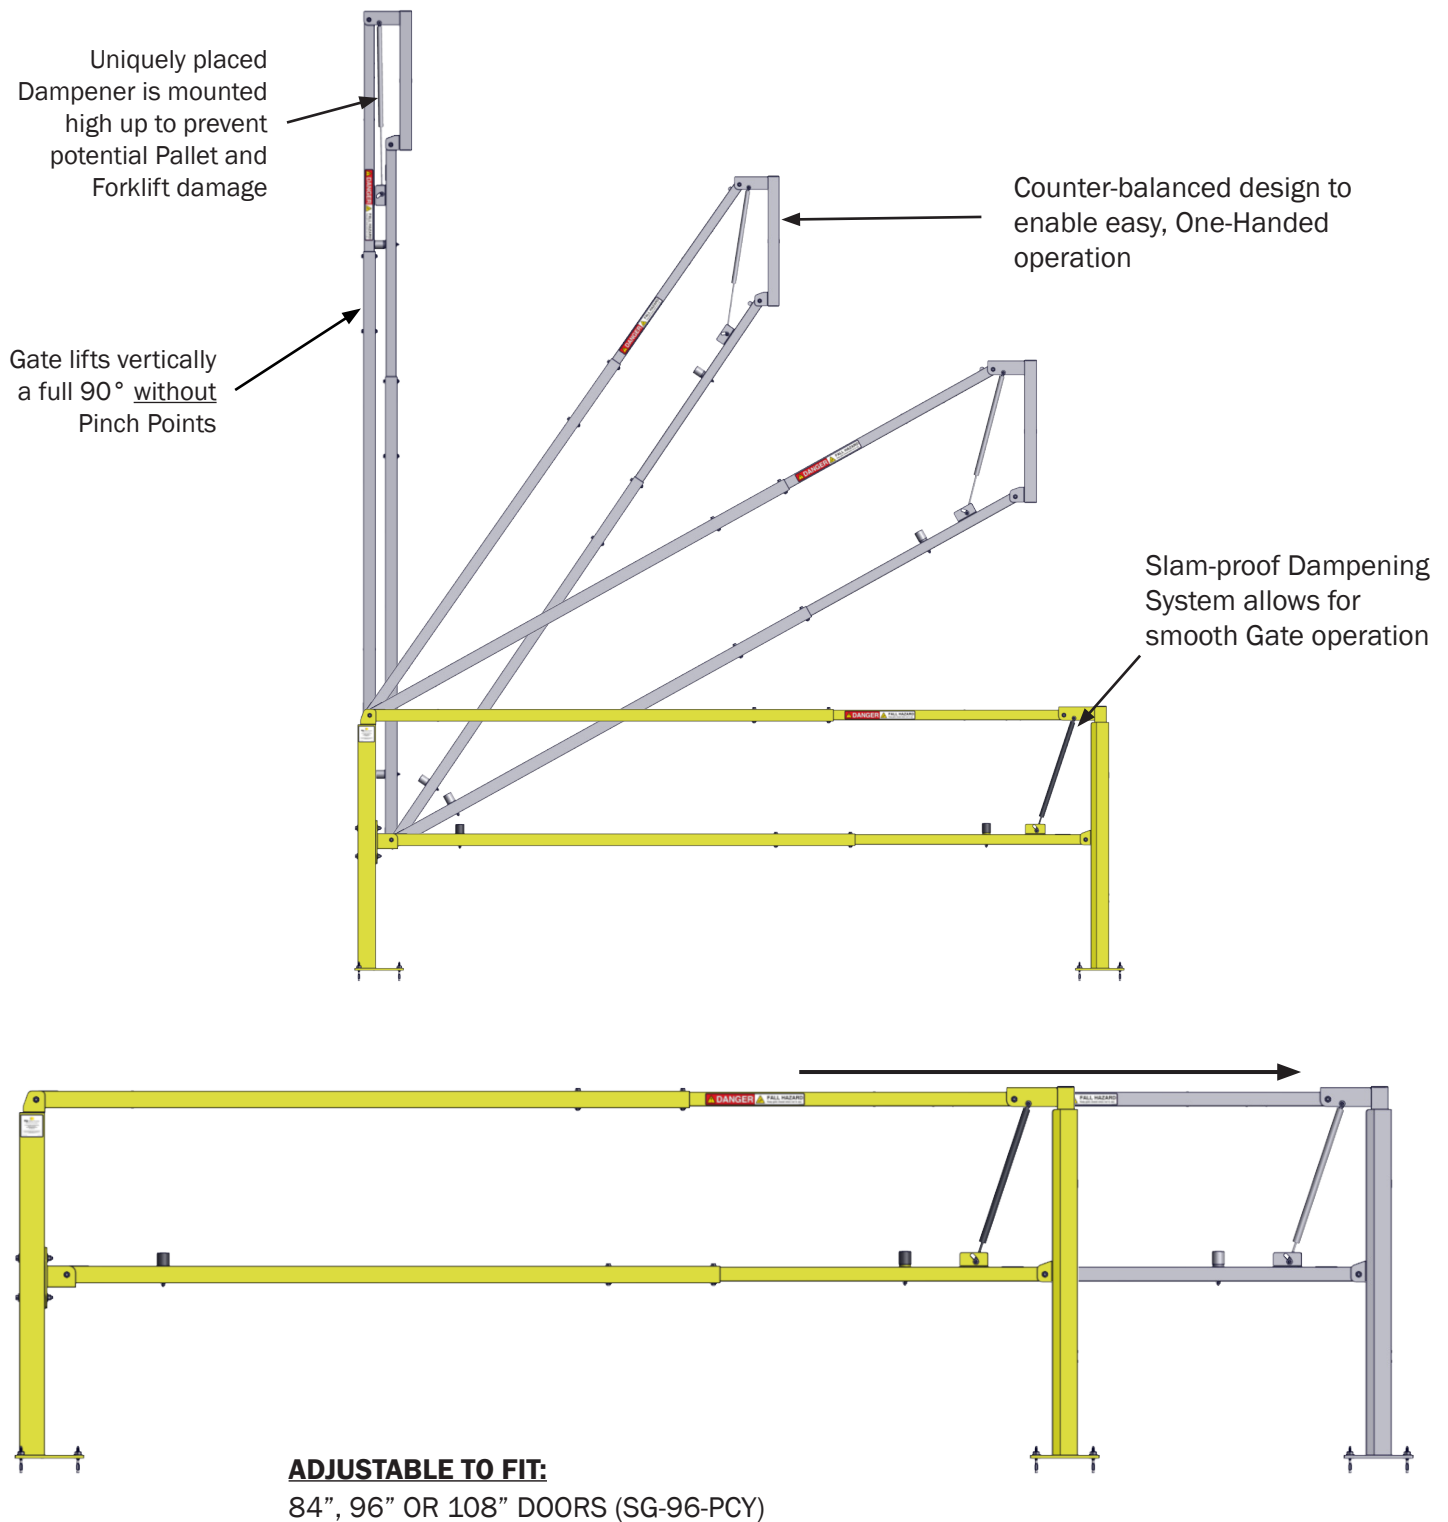


NOTICE For locking your Smart Gate in the closed position, call PS Safety Access at 877.446.1519 to order an Edge-Safe™ Lockout Kit (part #514582).


Replacement Parts List

IX. Replacement Parts List

NOTE 1. This replacement parts list and diagram is for the EdgeSafe™ SG-96-PCY Model.

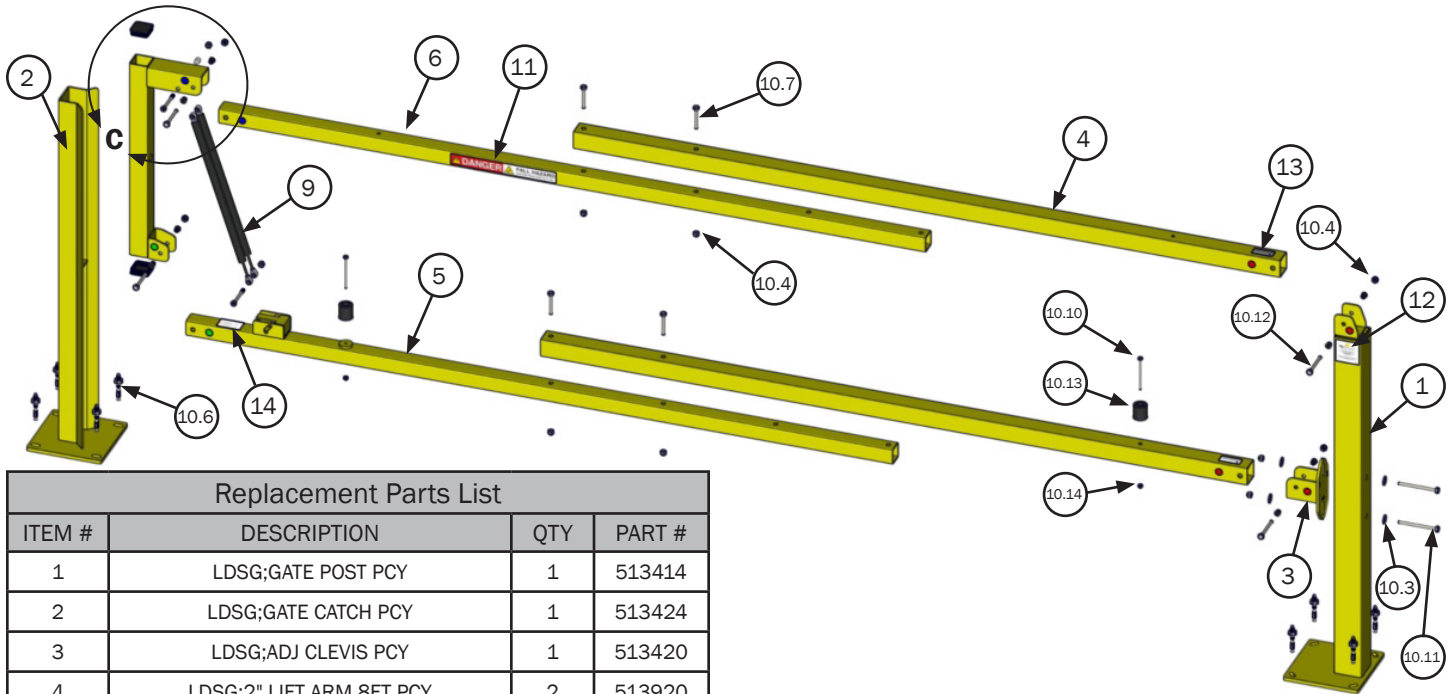

Replacement Parts List			
ITEM #	DESCRIPTION	QTY	PART #
1	LDSG;GATE POST PCY	1	513414
2	LDSG;GATE CATCH PCY	1	513424
3	LDSG;ADJ CLEVIS PCY	1	513420
4	LDSG;2" LIFT ARM 8FT PCY	2	513920
5	LDSG;1.75" LIFT ARM WLD PCY	1	513432
6	LDSG;1.75" LIFT ARM PCY	1	513430
7	LDSG;GATE END PCY	1	513437
8	PLUG; SQ TUBE 2" OD	2	513134
9	LDSG;DAMPENER 8 W/CLEVIS ENDS	2	513918
10	LDSG;HARDWARE BAG	1	514647
10.1	SPACER;NYLON .425X.625X.875	1	513444
10.2	BEARING;FLANGE .3765IDX.50300D	8	514702
10.3	WASHER;FLAT 3/8" 16 ZN	4	501947
10.4	NUT; NYLOCK 3/8" 16 ZN	10	501120
10.5	NUT;NYLOCK 5/16"18 HEAVY ZN	2	513780
10.6	ANCHOR;PWRSTUD+SD1-3/8"X3"CS	8	513454
10.7	BOLT; HEX 3/8" 16X2 1/4 GR5ZN	4	500405
10.8	BOLT;SHOULDER3/8"X2-1/4"	2	513779
10.9	BOLT; HEX 3/8" 16X2 3/4 GR5ZN	2	500406
10.10	BOLT; HEX 1/4" 20X3 1/2 GR5ZN	2	502651
10.11	BOLT;HEX3/8"16X4 GR5ZN	2	502859
10.12	BOLT; HEX 3/8" 16X 3GR5ZN	2	500411
10.13	BUMPER;ROUND 1-1/2"DIA X1-1/2	2	513133
10.14	NUT;NYLOCK 1/4"20 ZN NYL CAP	2	514472
11	DECAL;LDSG, SG, & MG DANGER	2	513488
12	DECAL;LDSG MARKETING	2	513489
13	DECAL;LDSG THIS SIDE UP	2	513490
14	LDSG; WARNING LABEL	1	513745

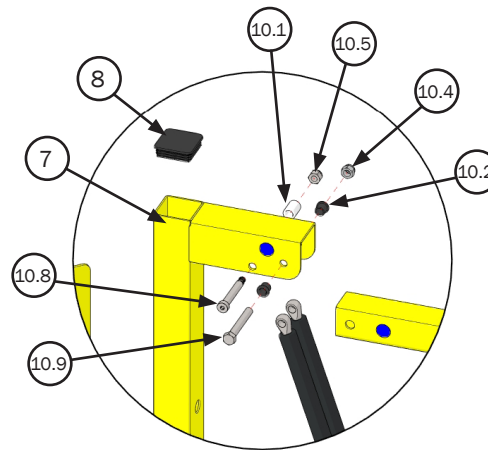

DETAIL C

FINISH OPTIONS	
PCY	Powder Coat Safety Yellow



For EdgeSafe™ Lockout Kit order (part #514582.) Kit includes (1)Storage Bracket, (1)Lock Pin, (2)Bolts, (2) Nylock Nuts, and Installation Instructions.

**TO ORDER PARTS CONTACT PS SAFETY ACCESS AT
877.446.1519 or 4psinfo@psindustries.com**

Size Reference Drawing

X. SG Size Reference Drawing

SG Size Reference Table		
	CLEAR OPENING WIDTHS	CLEARANCE HEIGHT
SG-96-PCY	84", 96", OR 108"	130 1/4" - 154 1/4"

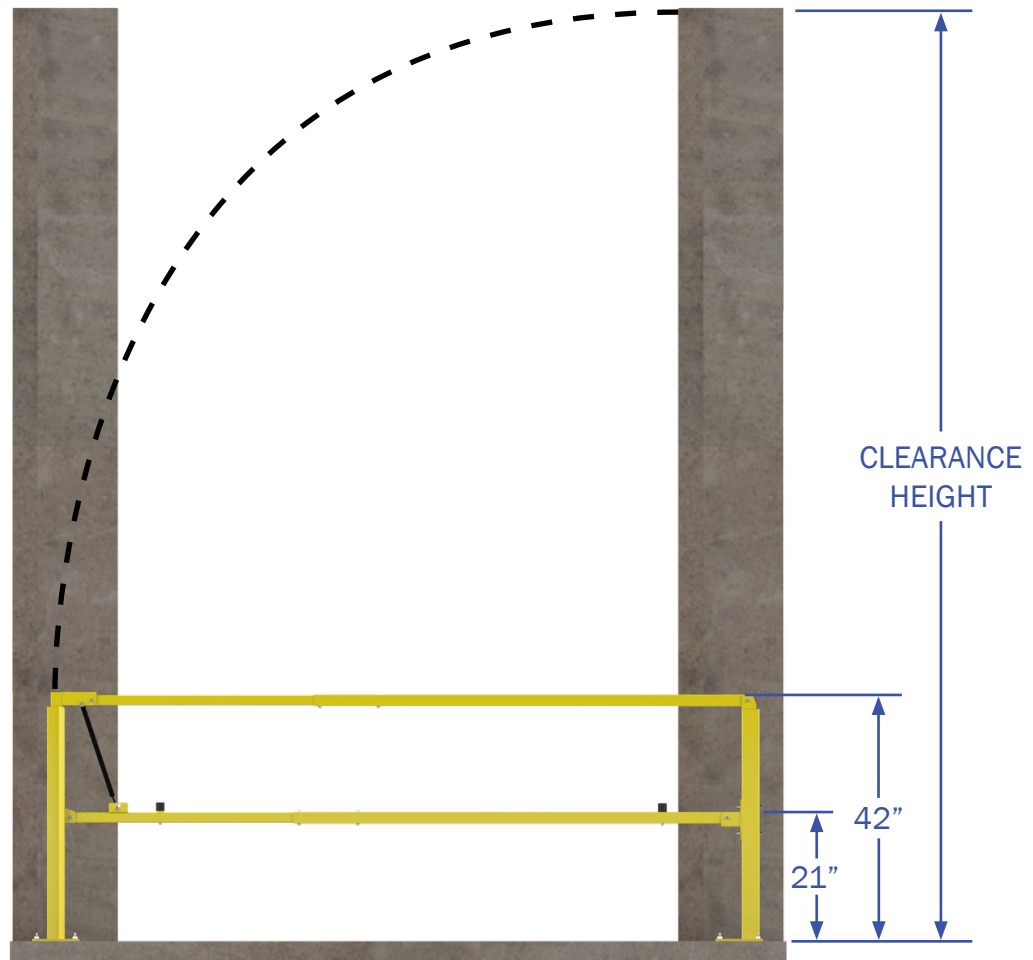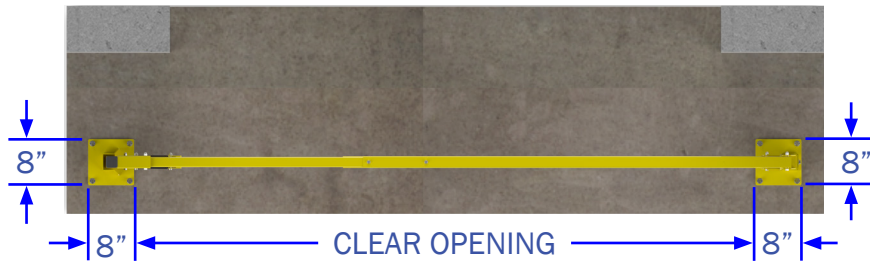

Inspection and Maintenance

XI. Inspection and Maintenance (Minimum Annually)

IMPORTANT! Consult parts list before replacing fasteners, as all have specific design load requirements. Only use like items for replacement.

A. Gate:

1. Inspect components for damage and misalignment. Adjust, repair, or replace as needed, to meet original design tolerance.
2. Check for proper alignment with catch. Adjust as necessary to achieve proper alignment.
3. Dampeners are maintenance free, replace dampener if assisting force has diminished.
4. Inspect bumpers for damage or wear, replace as needed.

B. Fasteners and mechanical connections:

1. All fasteners must be in place and adjusted to their original design standard. Replace any damaged components.
2. Check all mounting connections, making sure they meet original design standards (refer to instructions).
3. If gate closes too quickly, fasteners at four corners of the gate can be tightened to reduce closing speed.
4. If gate closes too slowly, fasteners at four corners of the gate can be loosened to increase closing speed.

C. Finishes:

1. Inspect and clean finishes periodically.
2. Touch up repair finishes, or refinish as necessary to protect the structural integrity of the Smart Gate.
3. The PCY Smart Gate comes with a polyester powder coat finish. Use finish materials compatible with powder coat. Follow paint manufacturers' instructions for prep and touch-up.

D. Housekeeping:

1. To ensure your product continues to operate and last, upon completion of proper installation, complete the following:
 - a. Clean all surfaces.
 - b. If project is ongoing, protect installed products until final completion of project.
 - c. Touch-up, repair, or replace damaged components.
2. Ensure the horizontal bars are clear of debris and interferences.

E. Labels and Placards:

1. Inspect all labels and placards.
2. Replace any labels and placards which are unreadable/missing.

Inspection and Maintenance Log

CRITICAL Periodic Inspection and Maintenance Required. Inspect at minimum annually.

Date Installed: _____

Product: _____

Model Number: _____

Serial Number: _____

Opening Identifier/ Number: _____

Location: _____

DATE INSPECTED	INSPECTED BY <i>(Print & Sign)</i>	INSPECTION ITEMS NOTED	CORRECTIVE ACTION	CORRECTED BY <i>(Print & Sign)</i>

18

Inspection and Maintenance Log

CRITICAL

Periodic Inspection and Maintenance Required. Inspect at minimum annually.

Date Installed:

Product:

Model Number:

Serial Number:

Opening Identifier/ Number:

Location:

DATE INSPECTED	INSPECTED BY <i>(Print & Sign)</i>	INSPECTION ITEMS NOTED	CORRECTIVE ACTION	CORRECTED BY <i>(Print & Sign)</i>

PS INDUSTRIES® INCORPORATED – LIMITED WARRANTY

Limited Warranty: Subject to the terms of this Limited Warranty, PS Industries® Incorporated warrants to the original user or consumer (the "Owner") of a PS Industries product (the "Product") that, for a period of one (1) year from date of shipment, the Product will be free from defects in material and workmanship under normal use and service, and provided the Product is installed, operated and maintained in accordance with instructions supplied by PS Industries. The terms and limitations of this Limited Warranty apply to all repaired or replacement Products for a term equal to the balance of the warranty remaining on the Product that was repaired or replaced as of the date of such repair or replacement. Register online at: www.psindustries.com/contact/register-your-product

PS Flood Barriers™ Product Warranty Registration: For PS Flood Barriers™ Products, this Limited Warranty will only be valid if the Owner completes the Warranty Registration Form provided within thirty (30) days of Product installation. To request a copy of the Warranty Registration Form, contact PS Industries Incorporated, 1150 S. 48th Street, Grand Forks, ND 58201, phone 877-446-1519, email: 4psinfo@psindustries.com. Register online at: www.psindustries.com/contact/register-your-product/ Additional Warranty Registration Forms can be downloaded at www.psfloodbarriers.com/download-center/

Warranty Exclusions: Notwithstanding anything to the contrary, this Limited Warranty does not cover any of the following:

1. Normal wear and tear (including, but not limited to, normal wear and tear to gaskets and weather seals); damage or accidents resulting from freight damage, from failure to follow precautionary safety measures, or applied paint failure; abuse, misuse or unauthorized modification of the Product; misapplication; improper installation; or any defects, damage or other harm that is not the result of the acts or omissions of PS Industries.
2. Cost of field labor or other charges incurred by Owner in removing and/or re-affixing the Product or any part or component thereof.
3. Transportation costs.

Unauthorized modification of or to the Product voids this Limited Warranty. Authorized modifications, received in writing from PS Industries, as long as the modification is accomplished in strict accordance with PS Industries' instructions, does not void warranty. To request product modifications contact PS Industries, 1150 S. 48th Street, Grand Forks, ND 58201, phone 877-446-1519, email: 4psinfo@psindustries.com.

Claim Procedure: To make a claim under this Limited Warranty, the claim must be received by PS Industries before the expiration of the above stated Limited Warranty period together with proof of purchase. Contact PS Industries at the address shown below.

PS Industries Incorporated	Toll Free: 877-446-1519
Attention: Warranty	Phone: 701-746-4519
1150 S. 48th Street	Fax: 701-746-8340
Grand Forks, ND 58201	E-mail: 4psinfo@psindustries.com

An authorized PS Industries representative must be given a reasonable opportunity to inspect and investigate the alleged Product defect prior to any work being done that affects the Product or its installation. PS Industries reserves the right to charge reasonable amounts for travel and labor associated with investigation of claims. PS Industries may also require photographs of the alleged Product defect or return of the Product or part to a designated PS Industries location, freight prepaid. A return goods authorization must be received prior to the return of the Product or part. Please contact PS Industries to determine the designated location for return and to obtain the return material authorization.

Exclusive Remedy: In the event of a warranty claim that PS Industries determines to be covered by this Limited Warranty, PS Industries will replace or repair, at PS Industries' discretion, the Product or any part of the Product found to be defective.

Disclaimers: The above warranty and remedy is the sole express warranty and remedy given by PS Industries on its Product. No warranties or representations at any time made by any representative from PS Industries shall vary or expand the provisions hereof. TO THE EXTENT PERMITTED BY LAW, ALL EXPRESS AND IMPLIED WARRANTIES (INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT) OTHER THAN THE EXPRESS LIMITED WARRANTY SET FORTH ABOVE ARE EXPRESSLY DISCLAIMED. UPON THE EXPIRATION OF THE ABOVE STATED LIMITED WARRANTY PERIOD, ANY AND ALL APPLICABLE IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT, ARE DISCLAIMED. SOME STATES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO OWNER.

LIABILITY LIMITATION: In no event will PS Industries' liability to Owner or any other person or entity exceed the price paid to PS Industries for the defective Product. IN NO EVENT SHALL PS INDUSTRIES BE LIABLE TO OWNER OR ANY OTHER PERSON OR ENTITY FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT OR SPECIAL DAMAGES OF ANY DESCRIPTION, WHETHER ARISING OUT OF WARRANTY (INCLUDING ANY IMPLIED WARRANTIES) OR ANY OTHER CONTRACT, STRICT LIABILITY, NEGLIGENCE OR OTHER TORT, OR OTHERWISE, INCLUDING ARISING FROM INSPECTION OR REMEDY DELAYS. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION AND EXCLUSION MAY NOT APPLY TO OWNER.

THIS WARRANTY GIVES OWNER SPECIFIC LEGAL RIGHTS AND OWNER MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.



877.446.1519

4psinfo@psindustries.com | pssafetyaccess.com
1150 South 48th Street | Grand Forks, ND 58201

Product Registration:
psindustries.com/contact/register-your-product